

Table-Top Glue Applicator

Installation & Operation Manual



Table-Top Glue Applicator

Installation & Operation Manual



Quick Machinery Company
9730 Soda Bay Road, PMB 5032
Kelseyville, CA 95451

phone: (707) 272-6719
fax: (707) 277-0227


e-mail: service@quickmachinerycompany.com
web: <http://www.quickmachinerycompany.com>

Contents

Introduction.....	9
Installation	11
Operation.....	13
Components.....	13
Operation	13
Daily Clean-up.....	13
Maintenance	15
Daily	15
Weekly.....	15

Introduction

Thank you for your purchase of a QUICK Table-Top Glue Applicator. Your machine has been designed for many years of trouble-free performance. Please read this installation & operation manual and follow its instructions to correctly install, operate and maintain your Glue Applicator. Doing so will help ensure optimum productivity and reliability of your machine.

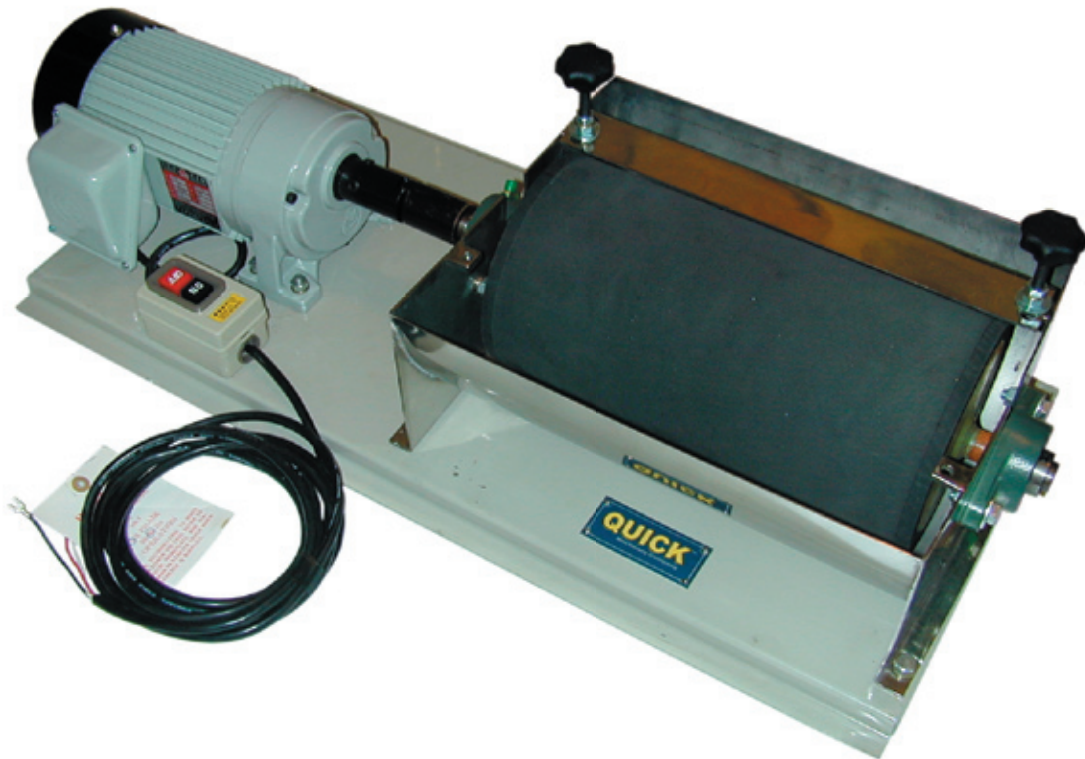


Installation

1. Unpack the machine.
2. Place the machine on a flat table-top.
3. Place the stainless steel glue pan onto the glue applicator base.
4. Place the glue roll onto the glue pan, making sure the glue roll shaft seats well into the brass main bearings.
5. Attach the stainless steel wiper blade to the glue pan with the provided thumb wheels.
6. Plug the electrical cord into a 110v, 60 hz, single-phase electrical outlet.

Operation

Components

- (1) Doctor Blade
- (2) Glue Roll
- (3) Glue Pan
- (4) Glue

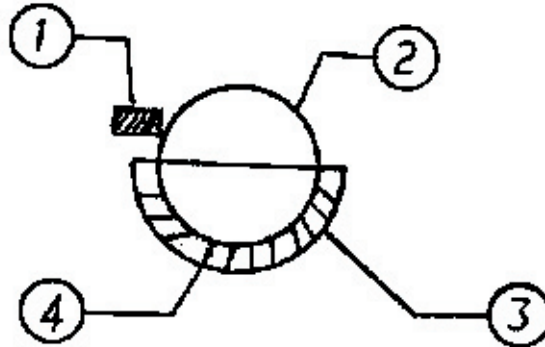

Operation

1. Fill the glue pan 1/3 full of glue.
2. Start the motor. After the glue completely coats the glue roll, adjust the wiper blade such that the desired thickness of glue spread is achieved.
3. Holding the stock to be glued with both hands, run the stock across the top surface of the glue roll. Glue will be transferred to the bottom edge of the stock.

Daily Clean-up

1. Remove the doctor blade, glue roll and glue pan. Clean them thoroughly with warm water.



Maintenance

Daily

Keep the machine clean

1. Clean the Applicator thoroughly as described on the Operation page.

Weekly

Grease the bearings

1. Grease the brass main bearings.

